


>> Riv 230 RIV 250 RIV 251 – PRESSURE RELIEF VALVES -
SETTING INSTRUCTION

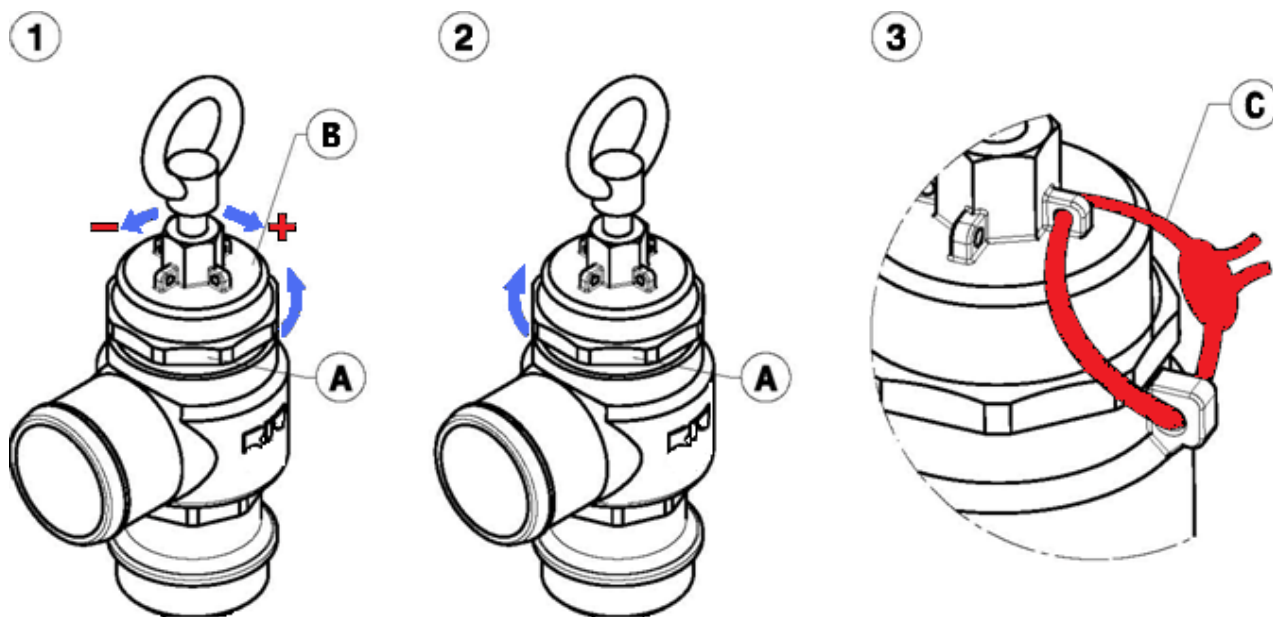

>> **Picture 1**

- 1) Unscrew the lock nut "A"
- 2) Turn the spring-tightener "B"
Clockwise to increase the pressure
Anti-clockwise to reduce the pressure

>> **Picture 2**

Once obtained the desired pressure, screw down the lock nut "A"

>> **Picture 3**

Fix the setting, using the rings "C"
Situated on the body and on the spring-tightener