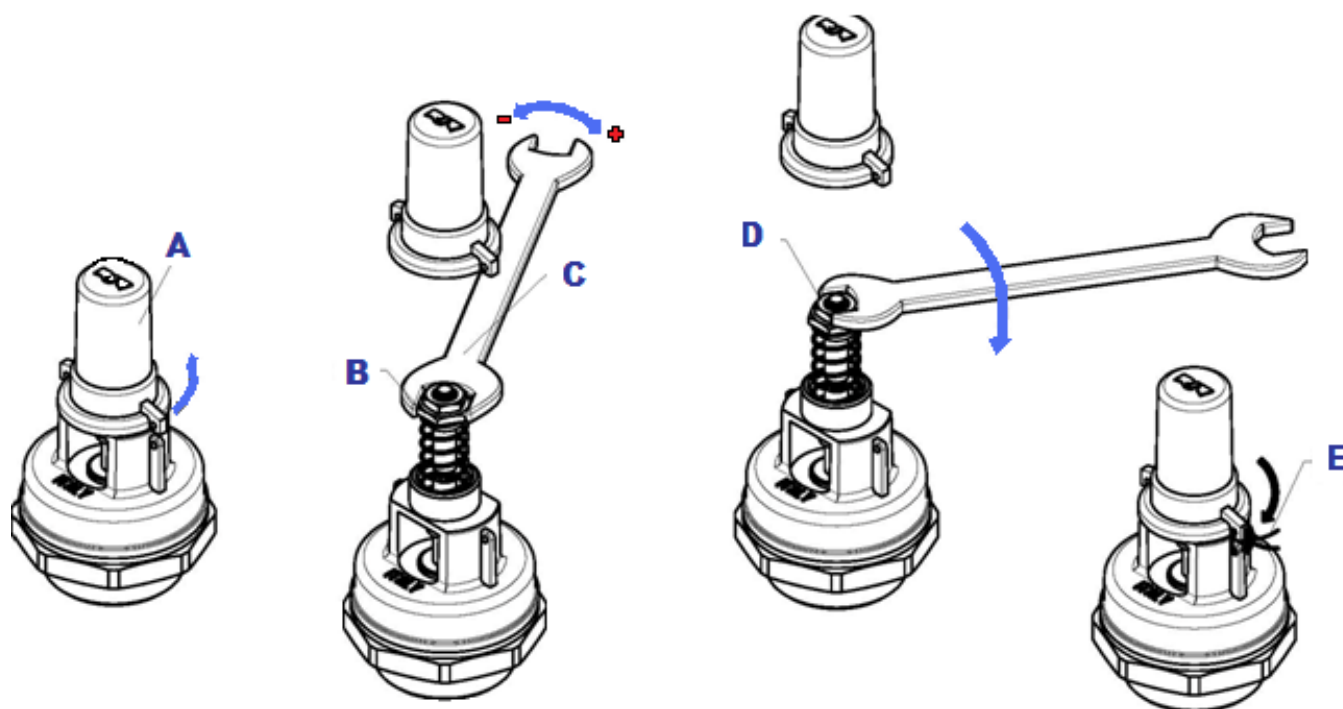


**>> Riv 290 Riv 291
VACUUM RELIEF VALVES SETTING INSTRUCTION**

- >> Remove the protection cap “A”**
- >> Turn the spring-tightener “B”, through a spanner “C”,
Clockwise to increase the pressure, Anti-clockwise to reduce the pressure**
- >> Once obtained the desired pressure, screw down the lock nut “D”**
- >> Screw down the protection cap and fix it using the rings “E” situated on the valve body
and on the cap**